


INSTALLING BLINDSPACE®

REESE™ FOR CURTAIN TRACKS

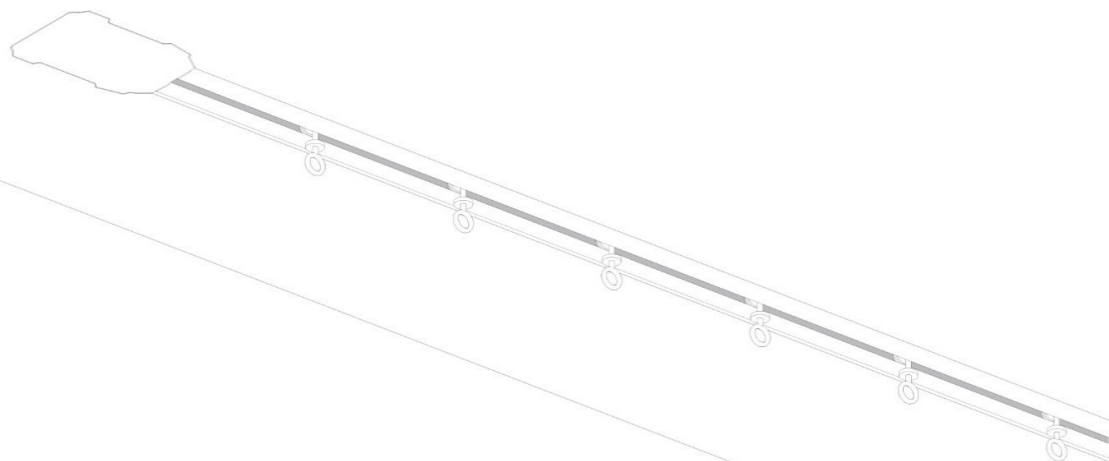

SCAN FOR MORE
INSTRUCTIONS




INSTALLING BLINDSPACE®


REESE™ FOR CURTAIN TRACKS

NOTE: Millimeter precision is important for perfect end result. Tracks and end sets must be securely attached within ceiling or wall. System fixings are never supplied by Blindspace, installer to ensure their fixing are suitable.


PARTS

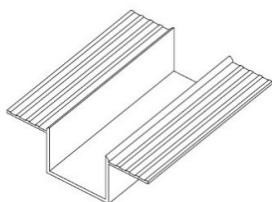

Track with Two Flanges

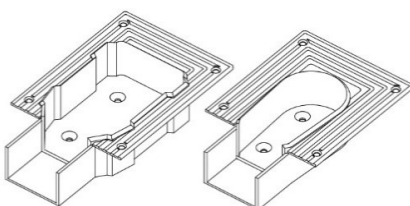

End set

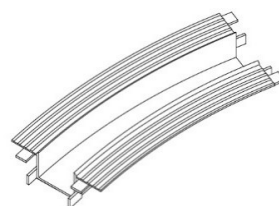

Curved Section

TOOLS



Screw Driver/Driller




Countersunk Screws



Drill Bits
2, 4, 6, 10mm




Countersink Drill Bit

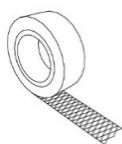

Scrim Tape



Squeegee

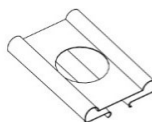


Rail Protector

INSTALLING BLINDSPACE®


REESE™ FOR CURTAIN TRACKS

PREPARATION OPTIONS

OPTION A: Blocking Only

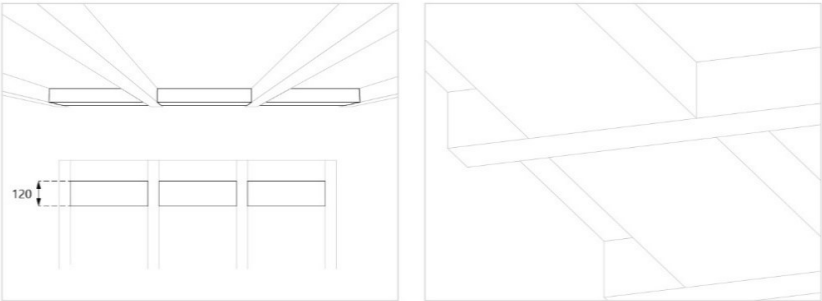

OPTION B: Blocking with Prepared Recess

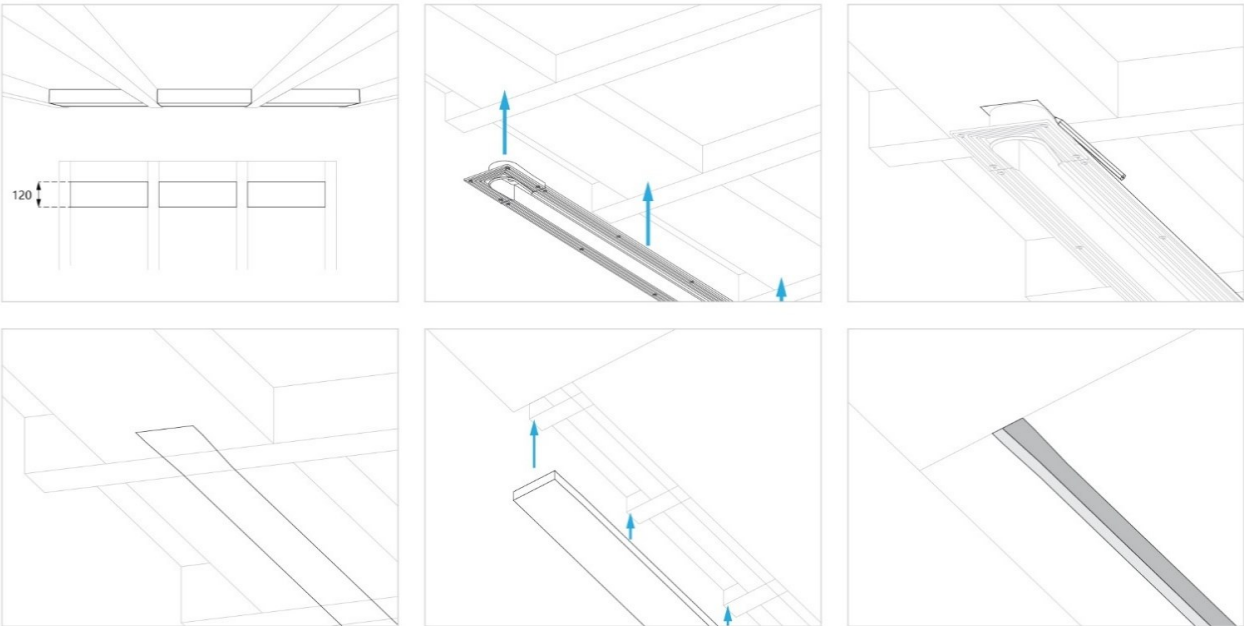


INSTALLING BLINDSPACE®

REESE™ FOR CURTAIN TRACKS

EXAMPLE CABLE ENTRY OPTIONS



PREPARE THE PRODUCT

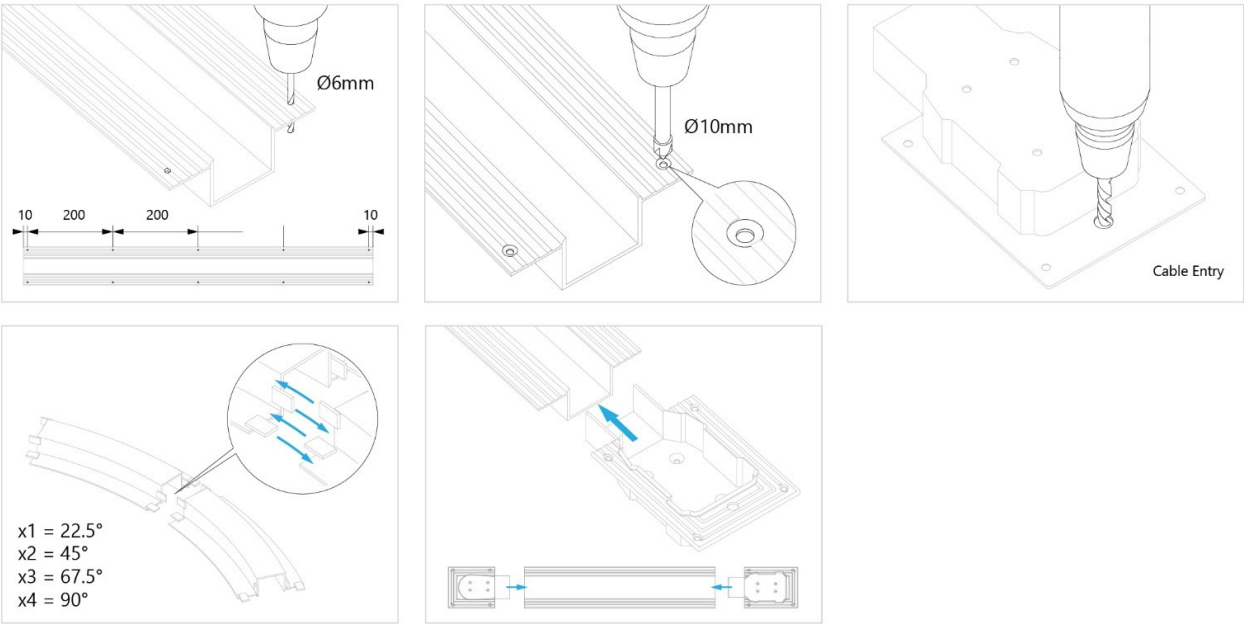


INSTALLING BLINDSPACE®

REESE™ FOR CURTAIN TRACKS

INSTALL TRACK


OPTION A: Blocking Only

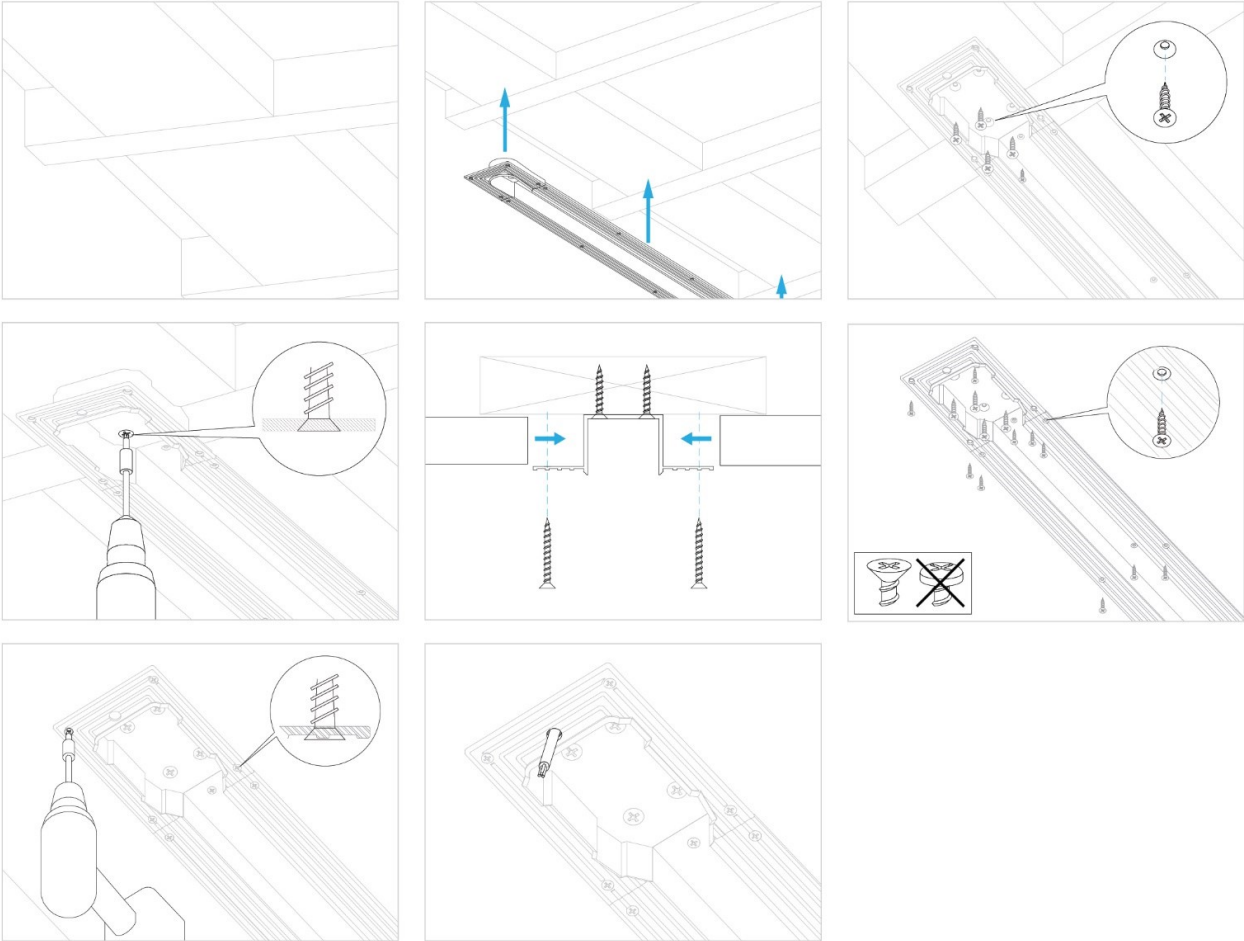


INSTALLING BLINDSPACE®

REESE™ FOR CURTAIN TRACKS

OPTION B: Blocking with Prepared Recess

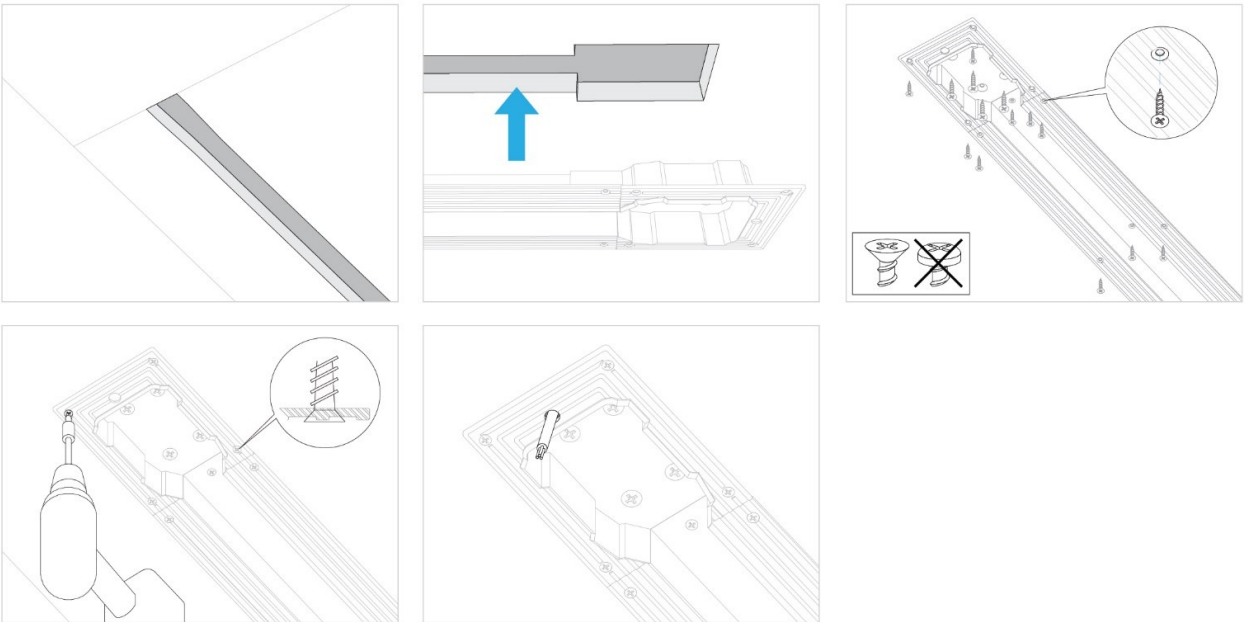


SCIM COAT AND PAINT

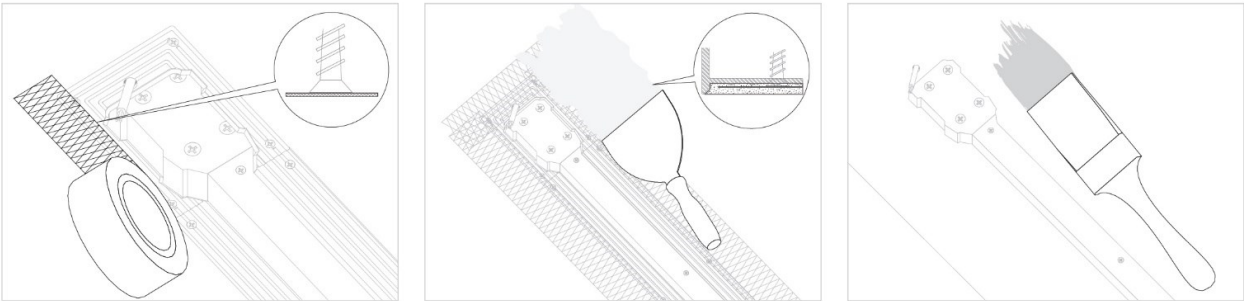

INSTALLING BLINDSPACE®

REESE™ FOR CURTAIN TRACKS

INSTALL CURTAIN TRACK

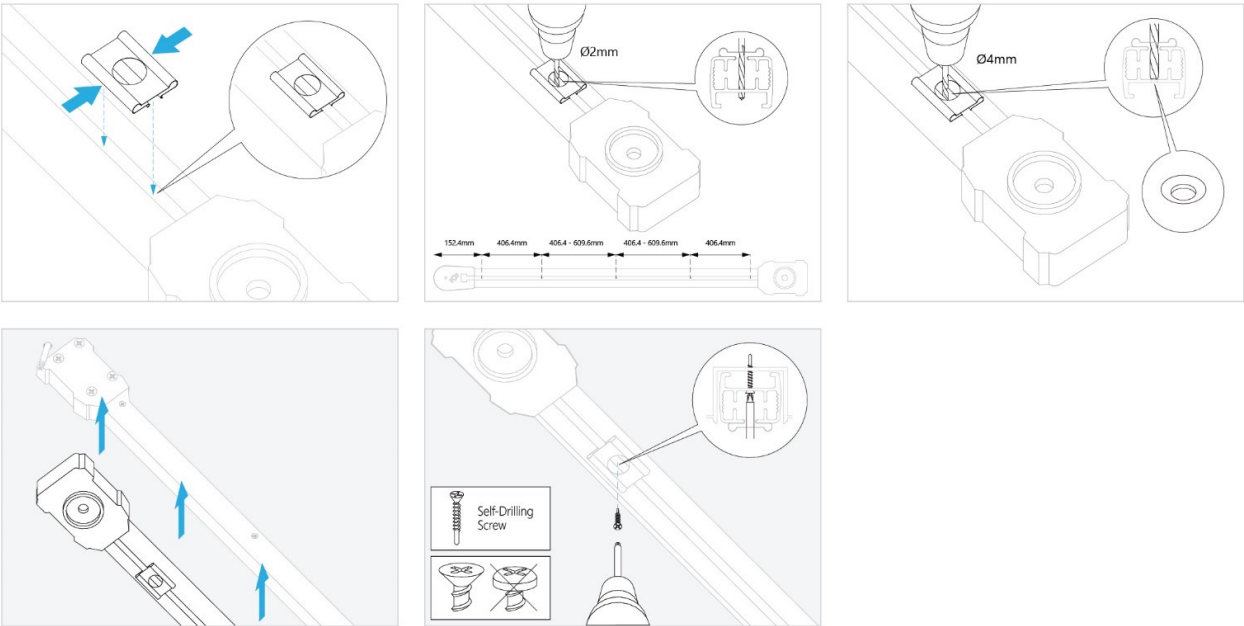

TEST TRACK RUNNERS

