
Blindspace TrackTrim®

for SILENT GLISS 5600 Curtain Track

MOTOR BOX TTSG56MB1F

TRACK PROFILE TT1F/TT2F

RETURN BOX TTSG51RB1F

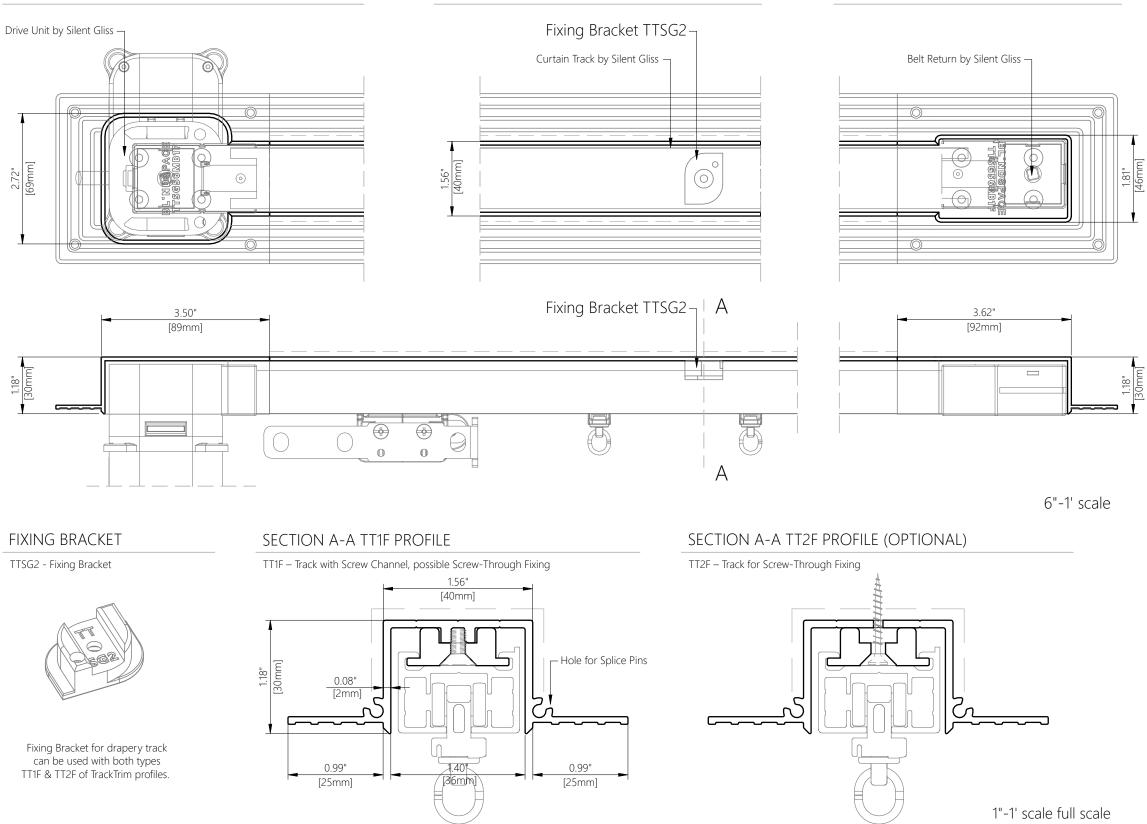

ProductBlindspace Track TrimDescriptionRecessed profiles to house curtain tracks.Curtain sizePlease see size chart and supplier details for curtain such as max. length and weight.FinishesWhite to be plastered in and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length6'-74" [2000mm] Cut to size for shorter lengths. Spliced together for longer lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297Print fileblindspace tracktrim with sg 5600 [inch].dwg		
to house curtain tracks.Curtain sizePlease see size chart and supplier details for curtain such as max. length and weight.FinishesWhite to be plastered in and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length6'-74" [2000mm] Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297	Product	Blindspace TrackTrim
sizedetails for curtain such as max. length and weight.FinishesWhite to be plastered in and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length6'-74" [2000mm] Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297	Description	
and decorated at site to match ceiling.MaterialTrack EN 6063 T6, End set PLA Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length6'-74" [2000mm] Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297		details for curtain such as max.
Thermoplastic PolyesterOptional accessoriesCurve Sections for bent tracks Long Splice Pins for joiningTrack length6'-74" [2000mm] Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297	Finishes	and decorated at site
accessoriesLong Splice Pins for joiningTrack length6'-74" [2000mm] Cut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297	Material	
lengthCut to size for shorter lengths. Spliced together for longer lengths.InstallationPlease refer to Sample Installation Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297		
Drawings available both in PDF and DWG at blindspace.comTracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation, shown in dash line around tracksPrint date2023/07/10Page sizeISO A3 420x297		Cut to size for shorter lengths.
Page size ISO A3 420x297	Installation	Drawings available both in PDF and DWG at blindspace.com Tracks to be fixed with countersunk screws every 7.87" [200mm] through back (and both flanges when available) into appropriate backing. Scrim tape to be used on flanges. Finished plaster level to be flush with chamfered edge. Allow 0.12" [3mm] recess space for ease of installation,
	Print date	2023/07/10
Print file blindspace tracktrim with sg 5600 [inch].dwg	Page size	ISO A3 420x297
	Print file	blindspace tracktrim with sg 5600 [inch].dwg